



Open the master carrier, and keep the sub carrier closed at all times. Only pull the positioner after the track assembly.




Push the two carriers to two track ends, then lock the buckle of the master carrier.




DO NOT mount the motor before completing the track assembly.

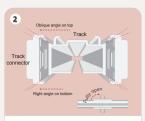

When connecting the tracks, ensure that the connector buckles are fully opened to a 90 degree angle.



Put on the sub gearbox, then pull the positioner to the sub gearbox until you hear a "click" sound.

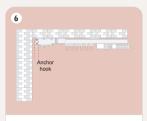

Hang up the anchor hook before mounting the track to the ceiling.



If you want to adjust the track (length or position), please detach the motor from the track first.

## **NOTES**

## Use of Curtain Motor

